

POS CLASS[®]

Hardware Solutions

Common Function Barcodes

Enter Setup	Exit with Save	Do not Apply Enter for suffix	(*) Apply Enter for suffix
Factory Reset	Exit without Save	Exit Auto Power Off	Disable Auto Upload
Save Custom Settings	Restore Customs Settings	Enable Auto-induction Mode	2.4G pairing



Due to the factory test of barcode scanner and adapter is separately, some scanners may not paired with the adapters. If you get the scanners can't transmit data successfully, please finish pairing with the following operations. It need around 3-15 seconds.



1



Enter Setup

2



2.4G pairing

3

Plug in 2.4G adapter to PC

Read 'Enter Setup'

Read '2.4G pairing'

Function Setup Barcodes



Enable Code bar



Enable Industrial 25



Enable Interleaved 25



Enable Matrix 25



Enable Standard 25



(*) Disable Code bar



(*) Disable Industrial 25



(*) Disable Interleaved 25



(*) Disable Matrix 25



(*) Disable Standard 25



(*) Enable Code 39



Enable Code 93



(*) Enable Code 128



(*) Enable EAN-8



Disable EAN-13



Disable Code 39



(*) Disable Code 93



Disable Code 128



Disable EAN-8



(*) Enable EAN-13



(*) Enable UPC-E



Enable MSI



 
Enable Code 11



Exit with Save



Disable UPC-E



(*) Disable MSI



(*) Disable Code 11



Enter Setup